



# QUANTUM


## FW33 "Y" Connector Instructions

**Please note that wherever "QF52" appears in the FreeWire instructions, replace it with "FW33"**

FW33 "Y" connector is used to set up a wireless TTL control when using Qflash, QF series TTL adapter, and Freewire FW10. It provides SYNC and TTL connection between Qflash, TTL adapter and an FW10 transmitter unit.

Using FW33 "Y" connector has two advantages over using QF52 "Y" connector. First the remote Qflash and local Qflash will be triggered at the same time. Second, the local Qflash can be turned on or off by FW10 Local/Relay switch.

If using QF52, the local Qflash can not be turned off with the Freewire Local/Relay switch. Also, if using QF52, the remote Qflash will be triggered later than local Qflash and the exposure indication (Under,Over,OK) on both Qflash's may be incorrect.

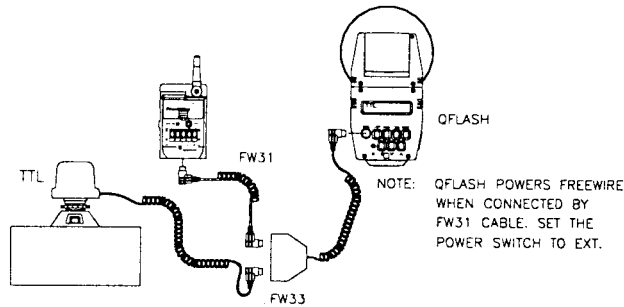

**QUANTUM INSTRUMENTS INC.**  
1075 Stewart Ave. Garden City NY 11530